

HYUNDAI
POWER PRODUCTS

RASAERBA A BATTERIA


COD. 65835 MOD. SRCZE-46A

MANUALE D'USO E MANUTENZIONE - ISTRUZIONI ORIGINALI

Leggere attentamente il manuale di istruzioni prima di utilizzare il prodotto. Conservare per consultazioni future.



GENUINE PRODUCT OF
HYUNDAI CORPORATION

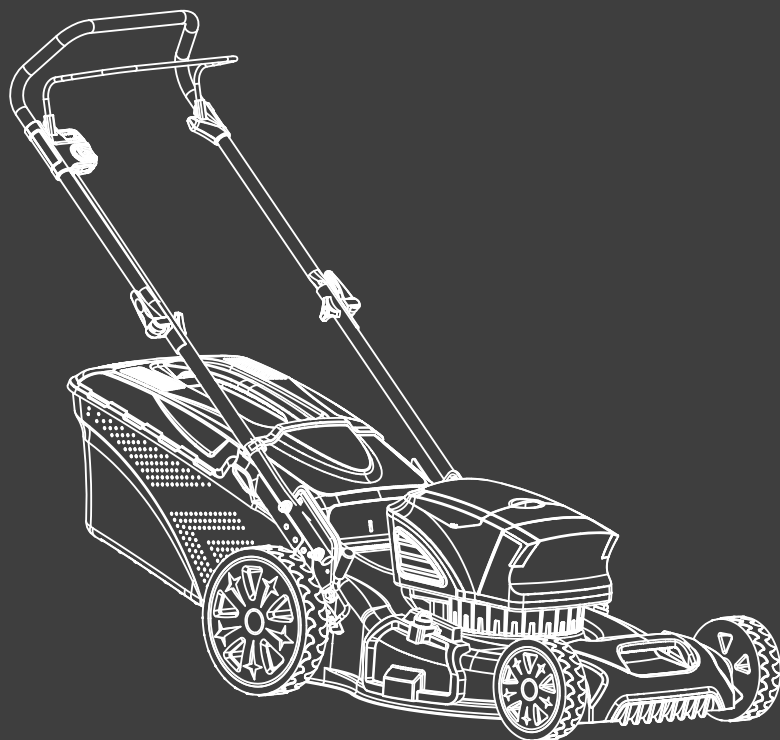



HYUNDAI
POWER PRODUCTS

Gentile Cliente,
grazie per avere scelto un prodotto Hyundai Power Products.

I nostri prodotti sono costruiti con i più elevati standard qualitativi per permettere una esperienza di uso semplice, piacevole e sicura.

E' importante dedicare qualche momento alla lettura di questo libretto di istruzioni: le informazioni che seguono sono fondamentali per la sicurezza e per ottenere il massimo delle potenzialità del prodotto.

In caso di necessità, per qualsiasi chiarimento o consiglio, siamo a disposizione ai recapiti riportati in fondo a questo libretto: saremo felici di aiutare e risolvere qualsiasi genere di problema grazie ai nostri tecnici specializzati.

Grazie per la preferenza!

Vinco Srl
Licenziatario ufficiale Italia
Hyundai Power Products

1. Description

1.1 Purpose

1.2 Overview

2. Safety

3. General safety rules

3.1 Training

3.2 Preparation

3.3 Operation

3.4 Maintenance

4. Symbol

5. Risks level

6. Recycle

7. Installation

7.1 Unpack the machine

7.2 Install the handlebar

7.3 Install the grass catcher

7.4 Install the mulch plug

7.5 Install the side discharge chute

7.6 Set the blade height

7.7 Install the battery pack

7.8 Remove the battery pack

8. Operation

8.1 Start the machine

8.2 Stop the machine

8.3 Empty the grass catcher

8.4 Operate on slopes

8.5 Operation tips

9. Maintenance

9.1 General maintenance

9.2 Lubrication

9.3 Replace the blade

9.4 Store the machine

10. Troubleshooting

11. Technical data

1. Description



1.1 Purpose

This machine is used for residential lawn mowing. The cutting blade must be approximately parallel to the ground. All four wheels must touch the ground while you mow.


1.2 Overview

(Figure 1)


1. Starting lever
2. Starting button
3. Fast lock
4. Grass catcher
5. Rear wheel
6. Cutting height adjustment knob
7. Side discharge chute
8. Side discharge lock
9. Side discharge cover
10. Deck
11. Front wheel
12. Grass comb
13. Front cover
14. Front handle
15. Washing plug
16. Battery power head
17. Rear cover
18. Step bolt
19. Handlebar support
20. Insulation pad 1
21. Down handlebar
22. Insulation pad 2
23. M8 hexagon nut
24. Fast lock
25. Fast lock buckle
26. Upper handlebar
27. Triangle knob
28. Grass catcher upper cover
29. Grass catcher
30. Rear cover support
31. Battery pack release button
32. Battery pack
33. Blade bolt
34. Butterfly washer
35. Mulch plug

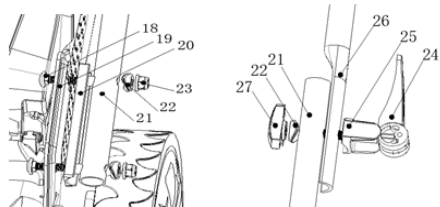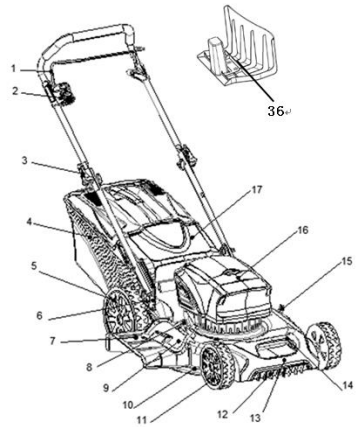

2. Safety

| | |
|---|----------------|
|  | WARNING |
| Make sure that you do/obey all safety instructions. | |
| Please refer to Safety manual | |

3. Product safety instructions

| | |
|---|----------------|
|  | WARNING |
| Read the manual carefully before use. Keep well the manual for future reference. | |

3.1 Training

Read instructions carefully, become familiar with controls and proper use of the machine.
Never allow children or people unfamiliar with the instructions to use the machine. Local regulations may restrict the age of the operator.
Keep in mind that the operator or user is responsible for accidents or hazards occurring to other people or their property.

3.2 Preparation

Wear heavy, long trousers, long sleeves, boots, and gloves. Do not wear loose fitting clothing, short trousers, sandals, or go barefoot.
Never wear loose clothes or clothes with strap or belt when mowing.
Never mow while people, especially children, or pets are nearby.
Objects struck by the lawn mower blade can cause severe injuries to persons. Thoroughly inspect the area where the machine is to be used and remove all rocks, sticks, metal, wire, bones, toys, or other foreign objects.
Before using, always visually inspect to ensure blades, lade bolts, and cutter assembly are not worn or damaged.
Replace worn or damaged blades and bolts in sets to preserve balance.
Check all nuts, bolts, and screws at frequent intervals for proper tightness to be sure the machine is in safe working condition.
Replace worn or damaged parts.
Do not leave the battery in the mower in direct sunlight.

3.3 Operation

Mow only in daylight or in good artificial light.
Avoid operating the machine in wet grass.
Avoid perating in rainy days.
Mowing on slopes:
Mow across slopes, never up and down.

Walk, and never run.

Exercise extreme caution when changing direction on slopes.

Do not mow excessively steep slopes.

Never operate the machine with defective guards or shields, or without safety devices, for example, deflectors and/or grass boxes, in place.

Start the motor according to manual. Keep feet far away from blade.

When starting the motor, machine shall not be inclined unless it can be started only in inclined situation. Under this situation, the inclination degree shall not exceed the indispensable degree, and only the side far away from operator can be lifted.

When starting the machine, do not stand in front of discharge area.

Do not put hands or feet near or under rotating parts. Always keep clear of the discharge opening.

Do not transfer the machine, when power is on.

Stop the machine, take out safety key and battery pack.

All the moving parts shall fully stop under below circumstances:

Whenever operator needs to leave the machine;

Clear the block and grooves;

Check, clean or work on the machine.

After clashing with foreign parts, check if there's damage on the machine. Repair the machine before restart or operate the machine.

Check the machine immediately if there's any abnormal vibration:

Check if there's any damage;

Replace or repair the damaged parts;

Check if there's any loose part. If there is, tighten the parts.

3.4 Maintenance

After use and before storage, disconnect the machine from the battery and check for damage.

When not in use store the machine out of the reach of children.

The machine should only be repaired by an authorized repairer.

Use only manufacturers recommended replacement parts and accessories.

Tighten all the nuts, bolts and screws to ensure the machine is working under secure situation.

Check if the grass catcher is worn or deteriorated

If the machine is equipped with 2 pieces of blades, beware that the other blade may also rotate due to one of them rotates.


 










Cool down the machine fully before storage.

Beware of blade rotation. Even when the power source is off, the blade is also possible to move.

For security reason, please replace the worn or damaged part. Only authorized parts can be used for replacement and repair.


4. Symbols




Some of the following symbols may be used on this product. Please study them and learn their meaning. Proper interpretation of these symbols will allow you to operate the product better and safer.

| Symbol | Instruction |
|---|--|
|  | Read manual carefully before operation. |
|  | Keep at least 15 meters away from the machine |
|  | Do not expose machine to rain or wet conditions |
|  | Keep hands and feet away from blade and cutting area. |
|  | Switch off and remove safety key before leaving the product unattended for any period. |
|  | Do not operate on inclines greater than 15°. Mow across the face of slopes, never up and down. |
|  | Beware of electric shock. |
|  | Wait for all components of machine to have completely stopped before touching them. |
|  | Danger: Do not touch. Hot surface will burn fingers or palms. |
|  | Danger: Keep away! Splashes may cause injury! |
|  | When in use, you need to wear safety protection devices. |
|  | Keep your hands and feet away from rotating blades. It may cut your hands and feet. |




5. Risk level

Below symbols and meaning is to indicate the relative risk level about this machine.

| Symbol | Name | 含义 |
|---|--------|--|
|  | DANGER | If the danger is not avoided, it will cause death or serious |

| | | |
|---|---------|--|
| | | injury. |
|  | WARNING | If the warning is not heeded, it can cause death or serious injury. |
|  | CAUTION | If the precaution is not taken, it may cause minor or moderate injury. |
|  | NOTICE | No specific symbols. If notice is not taken, it may result in property damage. |

6. Recycle

| | |
|--|--|
|  | Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. |
|  | Separate collection of used products and packaging allows materials to be recycled and used again. Re-use of recycled materials helps prevent environmental pollution and reduces the demand for raw materials. |
| Batteries  | At the end of their useful life, discard batteries with due care for our environment. The battery contains material which is hazardous to you and the environment. It must be removed and disposed of separately at a facility that accepts lithium-ion batteries. |

7. Installations

WARNING

Do not change or make accessories that are not recommended by the manufacturer.



WARNING

Do not put in the safety key or the battery pack until you assemble all the parts.

7.1 Unpack the machine



WARNING

Make sure that you correctly assemble the machine before use.




WARNING

- If there's parts damage, do not use the machine.
- If you do not have all the parts, do not operate the machine.
- If the parts are damaged or missing, speak to the service center.

1. Open the package
2. Read the documentation in the box.
3. Remove all the unassembled parts from the box.
4. Remove the machine from the box.
5. Installation shall be done before using the mower.
6. Unpack and take out the parts, check the parts according to the packing list.
7. Check the parts carefully. Ensure there's no damage during transportation.
8. If any parts missing or damage, do not use the product and contact with dealer.
9. Discard the box and package in compliance with local regulations.

7.2 Handlebar installation

(Figure 2)

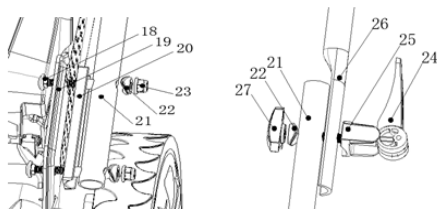

1. Take out 2 pieces of down handlebar; Align them with left and right handle bar and tighten with 4* M8*40 square neck bolt by handlebar, down handle bar, $\phi 8$ washer and M8 nut.
2. Mount the upper handlebar onto down handlebar. Tighten with 2* fast lock assy, 2*fast lock buckle, 2* insulation pad and 2* M8 triangle knob through both left and right handlebar separately.

NOTE


Make sure that the two handle knobs are in the same position.

WARNING

Do not make damage to the cables when you fold or unfold the handle.

7.3 Install the grass catcher

(Figure 3)

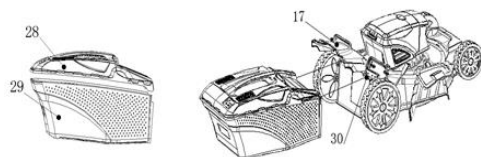


1. Remove the side discharge chute.

2. Open the rear cover and hold it.
3. Remove the mulch plug.
4. Hold the grass catcher handle and fit it onto the rear cover support by hook.
5. Release the rear cover. Fix the grass catcher.

7.4 Install the mulch plug


(Figure 4)

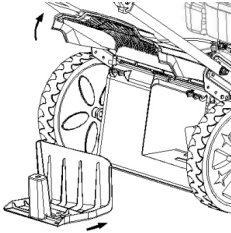

1. Open the rear cover and hold it;
2. Remove grass catcher.
3. Hold the mulch plug handle and put it into the rear discharge door.
4. Release the rear cover.

7.5 Install the side discharge chute

 (Figure 5)



WARNING

When you use the side discharge chute.


- Do not install the grass catcher.
- Keep the mulch plug installed.

1. Pull up the side discharge lock, uplift the side discharge cover and hang upside down the side discharge outlet onto spindle.
2. Put down the side discharge cover and press well the side discharge outlet.

7.6 Set the blade height

This machine can be set to different blade heights.

(Figure 6)

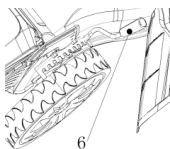

1. Pull the height adjustment lever rearward to increase the blade height.
2. Pull the height adjustment lever forward to decrease the blade height.

7.7 Install the battery pack.


| ⚠ | WARNING |
|---|---------|
| <ul style="list-style-type: none"> • If the battery pack or charger is damaged, replace the battery pack or the charger. • Stop the machine and wait until the engine stops before you install or remove the battery pack • Read, know, and do the instructions in the battery and charger manual. | |

| NOTE |
|--|
| The machine can switch battery pack automatically. When the first battery pack exhausts, the second battery pack will start automatically. |

1. Open the battery door.
2. Align the lift ribs on the battery pack with the grooves in the battery power head
3. Push the battery pack into the battery power head until the battery pack locks into place.
4. When you hear a click, the battery pack is installed.
5. Close the battery door.

7.8 Remove the battery pack

 (Figure 7)



1. Open the battery door.
2. Push and hold the battery release button.
3. Remove the battery pack from the machine.


8. OPERATION

| WARNING |
|---------------------------------------|
| Wear eye protection during operation. |

8.1 Start the machine

(Figure 8)

1. Slide the start button
2. Press the start button and pull the starting lever toward the handlebar direction.

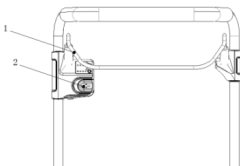

3. When the machine starts, release the start button.

8.2 Stop the machine.

1. Release the starting lever to stop the machine.

| |
|----------------|
| WARNING |
|----------------|

| |
|--|
| Wait until the blades fully stop before you start the machine again. Do not quickly turn the machine off and on. |
|--|

| |
|----------------|
| WARNING |
|----------------|

| |
|--|
| Always remove the safety key and battery pack after you complete the work. |
|--|

8.3 Empty the grass catcher.

1. Stop the machine.
2. Remove the safety key.
3. Remove the battery pack.
4. Open the rear cover and hold it.
5. Hold the grass catcher by its handle and unhook it.
6. Close the rear cover.
7. Empty the grass catcher.

8.4 Operate on slopes

| |
|----------------|
| WARNING |
|----------------|

| |
|---|
| Do not mow on the slopes with the decline more than 15°. If you are not comfortable, do not mow on a slope. |
|---|

- Do not go up and down on a slope when you mow across the face of the slope. Be careful when you change the direction on a slope. Monitor the holds, ruts, rocks and other hidden objects that can cause you to fall. Remove all obstacles such as rocks and tree limbs.
- Make sure that your footing is stable. If you are out of balance, release the bail switch immediately.
- Do not mow near drop-offs, ditches, or embankments.

8.5 Operation tips

Do not try to override the operation of the start button or bail switch.

Do not tilt the machine when you start it.

Do not put hands or feet near or below the rotating parts.

Keep the discharge chute clean.

Do not cut wet grass.

When cutting new or thick grass, adjust the blade height to the highest.

Clean the bottom of the mower deck after each use. Remove grass clippings, leaves, dirt, and other debris.

9. Maintenance

| |
|---------|
| WARNING |
|---------|

| |
|---|
| Remove the safety key and battery pack from the machine before maintenance. |
|---|

| |
|---------|
| WARNING |
|---------|

| |
|---|
| Keep the motor and batter pack free from grass, leaves or to much grease. |
|---|

| |
|---------|
| WARNING |
|---------|

| |
|--------------------------------------|
| Use only approved replacement parts. |
|--------------------------------------|

| |
|---------|
| WARNING |
|---------|

| |
|--|
| Do not let brake fluids, gasoline, petroleum-based materials touch the plastic parts. Chemicals can cause damage to the plastic, and make the plastic unserviceable. |
|--|

| |
|---------|
| WARNING |
|---------|

| |
|--|
| Do not use strong solvents or detergents on the plastic housing or components. |
|--|

9.1 General maintenance

Before each use, examine the machine for damaged, missing, or loose parts such as screws, nuts, bolts and caps.

Tighten correctly all the fasteners and caps.

Clean the machine with a dry cloth. Do not use water.

9.2 Lubrication


Apply sufficient quantity of high grade lubricant to all bearings. No more bearing lubrications is necessary in usual operation conditions.

| |
|---------|
| WARNING |
|---------|

| |
|---|
| Do not lubricate the wheel components: Lubrication can cause damage to the wheel components during operation. |
|---|

9.3 Replace the blade

(Figure 9)

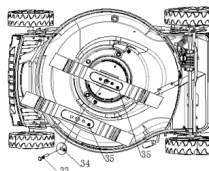

| |
|---------|
| WARNING |
|---------|

| |
|---------------------------------------|
| Use only approved replacement blades. |
|---------------------------------------|

| |
|--|
| WARNING |
| Wear heavy gloves or wind cloth around the blade when you touch the blade. |

1. Stop the machine.
2. Make sure that blades fully stop.
3. Remove the safety key and battery pack.
4. Turn the machine to its side.
5. Use a piece of wood to prevent the movement of the blade.
6. Remove the mounting screw with a wrench or socket.
7. Remove the blade.
8. Install the new blade. Make sure that the blade hole engages with the raised parts of blade seat.
9. Put in the mounting screw and tighten it.

9.4 Store the machine

Clean the machine before storage.

Make sure the machine is not hot when you store the machine.

Make sure that the machine does not have loose or damaged parts. If it necessary, do these steps/instructions:

Replace the damaged parts.

Tighten the bolts.

Speak to a person of an approved service center.

Store the machine in a dry area.

Make sure that children cannot come near the machine.

Please fold the machine push lever for easy storage.

1. Release the fast lock on the upside handlebar.
2. Release the triangle knob.
3. Fold the upper handlebar.
4. Do not damage the electric wire.

10.Troubleshooting


| Problem | Possible cause | Solution |
|----------------------------------|--|--|
| Handlebar is not in position | The bolts are not seated correctly. | Adjust the height of the handlebar and make sure that the knobs and bolts are aligned correctly. |
| The machine does not start | The battery is low | Charge the battery pack |
| | The bail switch is defective | Replace the bail switch. |
| The machine cuts grass unevenly. | The lawn is rough | Examine the mowing area. |
| | The blade height is not set correctly. | Move the wheels to a higher position. |
| The machine does not mulch | Wet grass clippings attach to | Wait until the grass dries before |

| | | |
|--|---|--|
| correctly. | the dck | mowing. |
| | The mulch plug is missing. | Install the mulch plug. |
| The machine is hard to push. | The grass is too thick, or the blade height is too low. | Increase he blade height. |
| | The grass catcher and the blade drags in thick grass. | Empty the grass clippings from the grass catcher. |
| There's a high vibration in the machine. | The blade is unbalanced and worn. | Replace the blade. |
| | The motor shaft is bent | <ol style="list-style-type: none"> 1. Stop the motor. 2. Remove the safety key and battery pack. 3. Disconnect the power source. 4. Check if there's any damage. 5. Repair the machine before you start it again. |
| The machine stops during mowing | The blade height is too low | Increase the blade height. |
| | The battery pack is out of power. | Charge the battery pack. |
| | The grass clippings attach to the deck or the blade. | Remove the battery pack ad check the deck. |
| | Operation temperature of the machine is too high. | Cool the machine. |

If you cannot find the solution to these problems, go to the service ceter.

11. Technical data

| | |
|------------------------------|-----------------|
| Voltage | 40v |
| No load speed | 1800~3200 r/min |
| Cutting width | 460mm |
| Cutting height | 27mm~77mm |
| Grass catcher capacity | 60L |
| Weight(without battery pack) | |
| Measured sound power level | LWA.d=96Db(A) |
| Battery model | |
| Charger model | |
| Vibration value | |
| IPX | IPX1 |

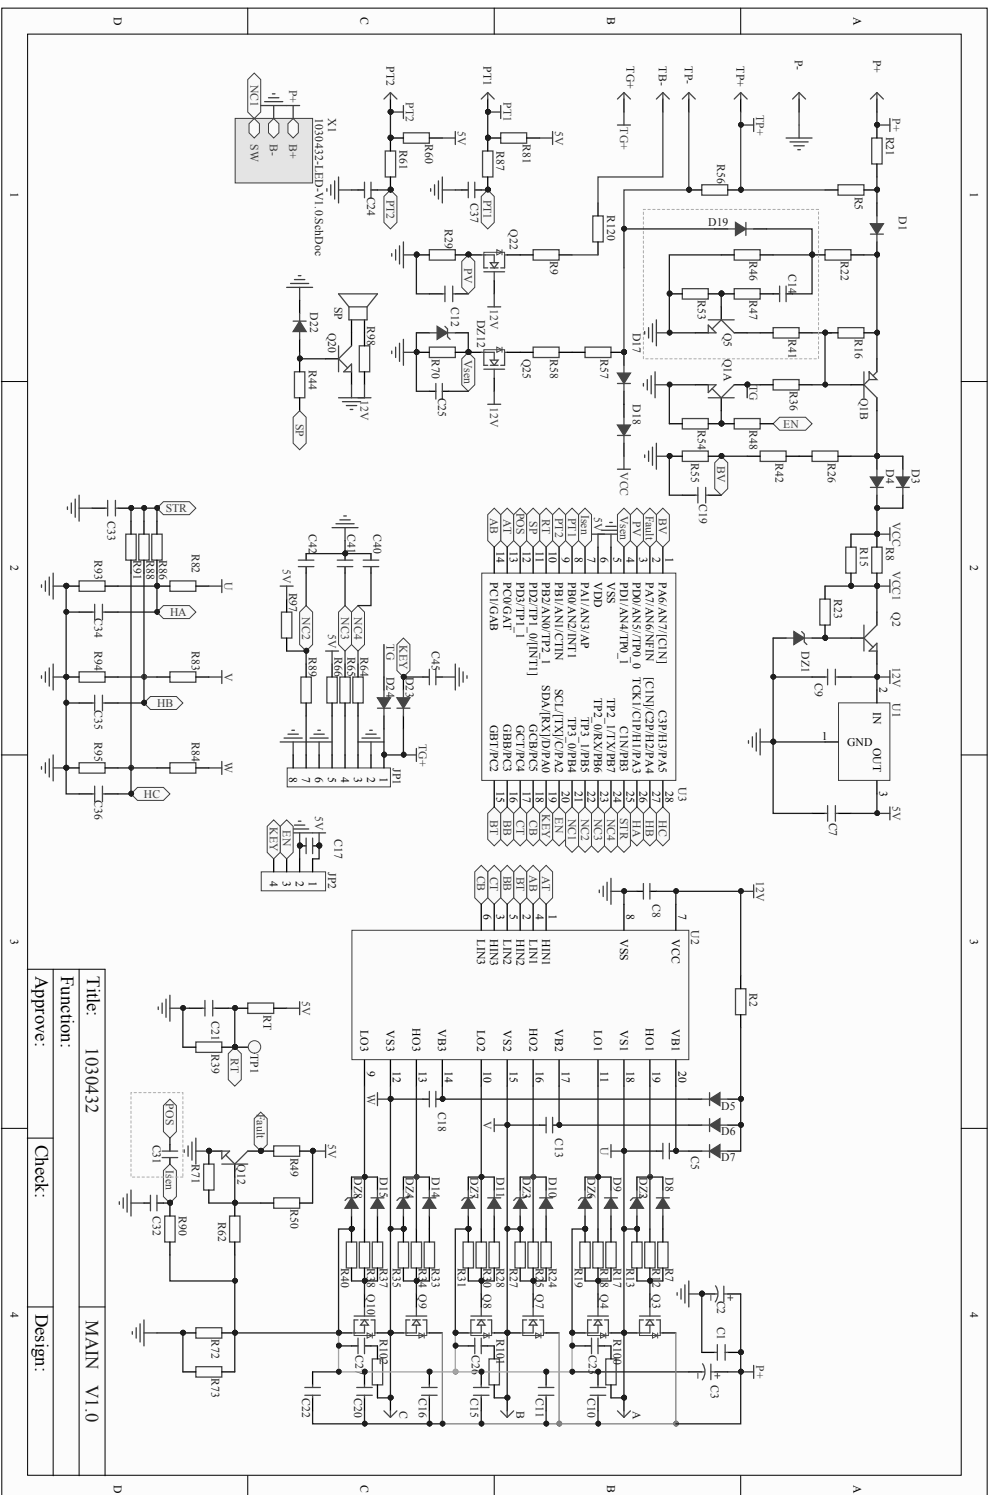

Title: 1030432
 Function: MAIN_V1.0
 Approve: _____
 Check: _____
 Design: _____

| No | Part code | English Name | Qty/Set |
|----|-----------------|------------------------------------|---------|
| 1 | 2.63.01.03688 | cylindrical pin A | 2 |
| 2 | 2.70.04.000398 | Battery cover pressure spring | 1 |
| 3 | 2.70.04.000379 | Battery pack cover | 1 |
| 4 | 2.70.04.000383 | Children lock switch | 1 |
| 5 | 2.63.01.03395 | Spring screw | 49 |
| 6 | 2.70.04.000384 | Children lock base | 1 |
| 7 | 2.70.04.000391 | Children lock connector | 1 |
| 8 | 2.70.04.000387 | Head indicator light right | 1 |
| 9 | 2.70.04.000388 | Head indicator light left | 1 |
| 10 | 2.63.01.04391 | flat washer A | 2 |
| 11 | 2.63.01.04336 | Cross screws A | 3 |
| 12 | 2.70.04.000380 | hood | 1 |
| 13 | 2.70.04.000386 | Lock cover plate | 1 |
| 14 | 2.70.04.000396 | Battery clip compression spring | 2 |
| 15 | 2.70.04.000385 | battery lock | 2 |
| 16 | 2.70.04.000364 | battery | 2 |
| 17 | 2.70.04.000397 | Battery compartment spring plate | 4 |
| 18 | 2.70.04.000392 | tension disc | 4 |
| 19 | 2.70.04.000378 | battery holder | 1 |
| 20 | 2.63.01.02092 | flat washer B | 2 |
| 21 | 2.70.04.000367 | control panel | 1 |
| 22 | 2.70.04.000390 | Lock button | 1 |
| 23 | 2.70.04.000399 | Lock button tension spring | 1 |
| 24 | 2.70.04.000389 | Battery socket | 1 |
| 25 | 2.70.04.000381 | Left decorative cover | 1 |
| 26 | 2.70.04.000420 | Power base | 1 |
| 27 | 2.70.04.000382 | Right decorative cover | 1 |
| 28 | 2.63.01.02026 | Bolt A | 4 |
| 29 | 2.63.01.02308 | Spring washer | 4 |
| 30 | 2.70.04.000419 | Motor | 1 |
| 31 | 2.63.01.03497 | Nut | 4 |
| 32 | 2.63.01.02504 | Flat washer C | 7 |
| 33 | 2.63.01.04133 | Combined Bolt | 3 |
| 34 | 2.70.04.000059 | Front decorative cover handle | 1 |
| 35 | 2.63.01.04268 | Cross screws B | 19 |
| 36 | 2.70.04.000058 | Front decorative cover | 1 |
| 37 | 2.70.04.000060 | Comb grass component | 1 |
| 38 | 2.63.01.03396 | Bolt B | 4 |
| 39 | 2.70.04.000330 | Blade Seat | 1 |
| 40 | 2.70.04.000320 | Blade | 1 |
| 41 | 2.70.04.000026 | Butterfly gasket | 1 |
| 42 | 2.63.01.04393 | Bolt C | 1 |
| 43 | 2.70.04.000417 | Drive rod | 1 |
| 44 | 2.70.04.000013 | Sponge sheath | 1 |
| 45 | 2.70.04.000310 | Start lever | 1 |
| 46 | 2.70.04.000375 | Support upper cover | 1 |
| 47 | 2.70.04.000374 | Safety button | 1 |
| 48 | 2.70.04.000370 | Switch box upper cover | 1 |
| 49 | 2.70.04.000463 | Auxiliary lever torsion spring | 1 |
| 50 | 2.70.04.000376 | Support lower cover | 1 |
| 51 | 2.70.04.000418 | Handle bar | 1 |
| 52 | 2.63.01.03032 | Bolt D | 2 |
| 53 | 2.70.04.000373 | operating lever | 2 |
| 54 | 2.63.01.04337 | cylindrical pin B | 2 |
| 55 | 2.70.04.000394 | operating lever torsion spring | 1 |
| 56 | 2.63.01.00446-1 | Iron gasket | 1 |
| 57 | 2.70.04.000372 | Toggle block | 1 |
| 58 | 2.70.04.000395 | switch button pressure spring | 1 |
| 59 | 2.70.04.000368 | Button light board | 1 |
| 60 | 2.70.04.000371 | Switch box lower cover | 1 |
| 61 | 2.70.04.000366 | Signal Harness | 1 |
| 62 | 2.70.04.000106 | Quick lock handle | 2 |
| 63 | 2.70.04.000107 | Quick lock handle pad | 2 |
| 64 | 2.70.04.000089 | Insulation pad 2 | 6 |
| 65 | 2.70.04.000105 | Triangle knob combination | 2 |
| 66 | 2.70.04.000360 | Handle Bar middle section | 1 |
| 67 | 2.06.04.063400 | Fixed line card | 2 |
| 68 | 2.63.01.01492 | Flywheel nut | 8 |
| 69 | 2.70.04.000088 | Insulation pad 1 | 2 |
| 70 | 2.70.04.000017 | Thrust bracket fixing seat (right) | 1 |
| 71 | 2.63.01.04284 | Bolt E | 4 |
| 72 | 2.70.04.000016 | Thrust bracket fixing seat (left) | 1 |
| 73 | 2.63.01.02772 | Bolt F | 4 |
| 74 | 2.70.04.000023 | Rear cover | 1 |
| 75 | 2.70.04.000025 | Rear cover plate button spring | 1 |
| 76 | 2.70.04.000041 | Rear cover plate shaft | 1 |

| | | | |
|-----|-----------------|-------------------------------------|----|
| 77 | 2.63.01.03679 | split washer | 2 |
| 78 | 2.70.04.000042 | Rear cover plate base | 1 |
| 79 | 2.63.01.00291 | Nut B | 16 |
| 80 | 2.70.04.000074 | radius adjustment positioning block | 1 |
| 81 | 2.63.01.01756 | Bolt G | 10 |
| 82 | 2.70.04.000423 | Deck | 1 |
| 83 | 2.09.01.000600 | O ring | 1 |
| 84 | 2.70.04.000057 | Cleaning nozzle | 1 |
| 85 | 2.70.04.000100 | grass bag wind window panel | 1 |
| 86 | 2.70.04.000099 | grass bag upper cover handle | 1 |
| 87 | 2.70.04.000098 | cover of straw collection | 1 |
| 88 | 2.70.04.000101 | Grass bag skeleton | 1 |
| 89 | 2.63.01.04156 | Special big washer | 4 |
| 90 | 2.70.04.000114 | Grass collecting bag | 1 |
| 91 | 2.70.04.000476 | wheel cap | 2 |
| 92 | 2.63.01.02112 | Nut C | 4 |
| 93 | 2.70.04.000473 | wheel | 2 |
| 94 | 2.63.01.04264 | Wave spring washers | 4 |
| 95 | 2.63.01.02885 | Bolt H | 2 |
| 96 | 2.70.04.000037 | adjustment lever rubber seal | 1 |
| 97 | 2.70.04.000036 | Gear adjustment lever | 1 |
| 98 | 2.02.02.036600 | Drive gear (right) | 1 |
| 99 | 2.70.04.000032 | fixed block | 2 |
| 100 | 2.70.04.000441 | rear axle | 1 |
| 101 | 2.70.04.000053 | Self-propelled spring | 1 |
| 102 | 2.07.03.003000 | Shaft ring | 4 |
| 103 | 2.70.04.000414 | Self Propeller Assembly | 1 |
| 104 | 2.63.01.04266 | cylindrical pin C | 2 |
| 105 | 2.70.04.000090 | Axle sleeve | 2 |
| 106 | 2.63.02.032800 | Stamped bearings | 2 |
| 107 | 2.70.04.000477 | dust cover | 2 |
| 108 | 2.02.02.036500 | Drive gear (left) | 1 |
| 109 | 2.07.03.003000 | Shaft ring | 4 |
| 110 | 2.70.04.000046 | Lock button | 1 |
| 111 | 2.70.04.000047 | Side row cover plate | 1 |
| 112 | 2.70.04.000049 | Button spring | 1 |
| 113 | 2.63.01.01835 | split washer | 2 |
| 114 | 2.70.04.000052 | Side row shaft | 1 |
| 115 | 2.63.01.04263 | Half round head low square nut | 2 |
| 116 | 2.70.04.000051 | Side row cover plate spring | 1 |
| 117 | 2.70.04.000050 | Side row bracket | 1 |
| 118 | 2.63.01.04392 | Bolt J | 1 |
| 119 | 2.63.01.01234 | Semicircle key | 1 |
| 120 | 2.70.04.000416 | drive pulley | 1 |
| 121 | 2.02.07.009106 | Bolt | 1 |
| 122 | 2.63.01.04262 | Bolt H | 1 |
| 123 | 2.70.04.000054 | Belt Cover | 1 |
| 124 | 2.63.01.04267 | Bolt K | 2 |
| 125 | 2.70.04.000421 | Grass cover plate | 1 |
| 126 | 2.70.04.000034 | Connecting rod spring | 1 |
| 127 | 2.70.04.000444 | connecting rod | 1 |
| 128 | 2.70.04.000029 | Axle sleeve | 2 |
| 129 | 2.70.04.000426 | front axle | 1 |
| 130 | 2.70.04.000474 | wheel cap | 2 |
| 131 | 2.70.04.000469 | Traveling wheel | 2 |
| 132 | 2.70.04.000031 | fixed block | 2 |
| 133 | 2.63.01.02093 | flat washer | 4 |
| 134 | 2.63.01.02476 | B-type split pin | 2 |
| 135 | 2.63.01.00186-1 | Bolt K | 1 |
| 136 | 2.63.01.02160 | Nut D | 1 |
| 137 | 2.70.04.000415 | Drive cable | 1 |
| 138 | 2.70.04.000048 | Side discharge port | 1 |
| 139 | 2.70.04.000043 | Blocking grass head | 1 |
| 140 | 5.07.001.000433 | Charger Assembly | 1 |

CERTIFICATO DI GARANZIA
Vinco s.r.l. - P.zza Statuto,1 - 14100 Asti - Italy

Modello: _____ Codice: _____

Data di acquisto _____

**QUESTO CERTIFICATO NON DEVE ESSERE SPEDITO MA
CONSERVATO UNITAMENTE ALL'IMBALLO ORIGINALE**

La garanzia ha validità soltanto se corredata da **RICEVUTA FISCALE**,
Vi consigliamo quindi di allegarla al presente certificato di garanzia.

La garanzia ha valore per un periodo di 2 anni dalla data di acquisto (un anno in caso di beni strumentali) e viene comprovata da un documento valido agli effetti fiscali, rilasciato dal venditore autorizzato, riportante la ragione sociale dello stesso e la data in cui è stata effettuata la vendita. Affinché la garanzia sia operativa, è necessario che il certificato di garanzia sia conservato unitamente ad uno dei documenti validi agli effetti fiscali riportante gli estremi identificativi del prodotto, e che entrambi siano esibiti in caso di intervento da parte di personale tecnico dei Centri Assistenza Autorizzati.

Questo certificato di garanzia si riferisce alle condizioni di Garanzia Convenzionali del Produttore nei confronti del Consumatore e non pregiudica i diritti della Garanzia Europea (previsti dalla Dlgs 206/2005 Codice del Consumo).

Per fruire del servizio di assistenza tecnica in garanzia, il consumatore può:

1. recarsi presso il punto vendita senza alcuna incombenza ulteriore; 2. richiedere il servizio aggiuntivo di assistenza con ritiro a domicilio. Il servizio è aggiuntivo e non sostitutivo rispetto a quello di cui al punto 1 e si applica solo alle tipologie di prodotti previste da Vinco. Invitiamo a contattare Vinco allo scopo di verificare se il prodotto possa usufruire di questo servizio.

All'interno del periodo di garanzia, Vinco S.r.l. si impegna a sostituire o riparare gratuitamente le parti componenti l'apparecchio che risultino difettose all'origine per vizi di fabbricazione, senza alcuna spesa per il consumatore.

Non sono coperte dalla garanzia tutte le parti che dovessero risultare difettose a cause di negligenza o trascuratezza nell'uso (mancata osservanza delle istruzioni per il funzionamento dell'apparecchio), errata installazione o manutenzione, manutenzione operata da personale non autorizzato, danni da trasporto, ovvero di circostanze che, comunque, non possono farsi risalire a difetti di fabbricazione dell'apparecchio. Sono esclusi dalle prestazioni in garanzia gli interventi inerenti l'installazione e l'allacciamento agli impianti di alimentazione nonché le manutenzioni citate nel libretto di istruzioni.

Non sono inoltre coperti da garanzia le avarie causate da urti, manomissioni o installazioni improprie.

Questo certificato di garanzia è valido solo se l'apparecchiatura è venduta ed installata sul territorio italiano (compresi la Repubblica di San Marino e la Città del Vaticano). La richiesta di intervento per riparazioni in garanzia verrà evasa con prontezza dagli organi competenti, compatibilmente con le esigenze di carattere organizzativo. Il produttore non potrà comunque rispondere di disagi dipendenti da eventuali ritardi nell'esecuzione dell'intervento. Il consumatore finale dovrà presentare l'apparecchio da riparare in garanzia presso il punto vendita, unitamente al documento fiscale di acquisto ed al certificato di garanzia. Il produttore declina inoltre ogni responsabilità per eventuali danni che possano, direttamente o indirettamente, derivare a persone, cose ed animali domestici in conseguenza della mancata osservanza di tutte le prescrizioni indicate nell'apposito Libretto Istruzioni e concernenti specialmente le avvertenze in tema di installazione, uso e manutenzione dell'apparecchio. Qualora l'apparecchio venisse riparato presso uno dei Centri Assistenza Autorizzati indicati dal produttore, i rischi di trasporto relativi saranno a carico dell'utente nel caso di invio diretto ed a carico del Servizio nel caso di ritiro presso l'utente.



DICHIARAZIONE DI CONFORMITÀ CE

(Ai sensi della direttiva macchine 2006/42/CE Allegato II parte 1.A)

VINCO S.r.l. - Piazza Statuto 1 - 14100 Asti

dichiara sotto alla propria responsabilità, che la seguente macchina, identificata come:

Denominazione, funzione, tipo: rasaerba con motore a scoppio

Modello: SRCZE-46A - 65835

Marca: HYUNDAI

Mese e anno di fabbricazione: Dicembre 2023

soddisfa i pertinenti requisiti delle seguenti Direttive:

Direttiva Macchine 2006/42/CE

EMC 2014/30/UE

OND 2005/88/EC e 2000/14/CE

RoHS 2011/65/EC

Livello di potenza acustica garantito $L_{WA} = 96$ dB

Norme armonizzate:

EN ISO 5395-1:2013/A1:2018

EN ISO 5395-2:2013/A2:2017

EN ISO 3744, EN 14982 :2009

Vinco s.r.l., Piazza Statuto 1 - 14100 Asti, Italia.

Asti, 27/10/2023

Luogo e data

Legale rappresentante (Lidio Conti)

HYUNDAI
POWER PRODUCTS



GENUINE PRODUCT OF
HYUNDAI CORPORATION

Importato e Distribuito da Vinco S.r.l.
Pzza Statuto,1 – 14100 Asti (AT) ITALY
Tel: +39 0141 351284 Fax: +39 0141 351285
E-mail: info@vincoasti.it - www.vincoasti.com

CENTRO RICAMBI E ASSISTENZA:

Viale Giordana, 7 - 10024 Moncalieri (TO) - ITALIA Tel: +39 0141/1766315
Assistenza e-mail: assistenza@vincoasti.it - Ricambi: ricambi@vincoasti.it

MADE IN CHINA